


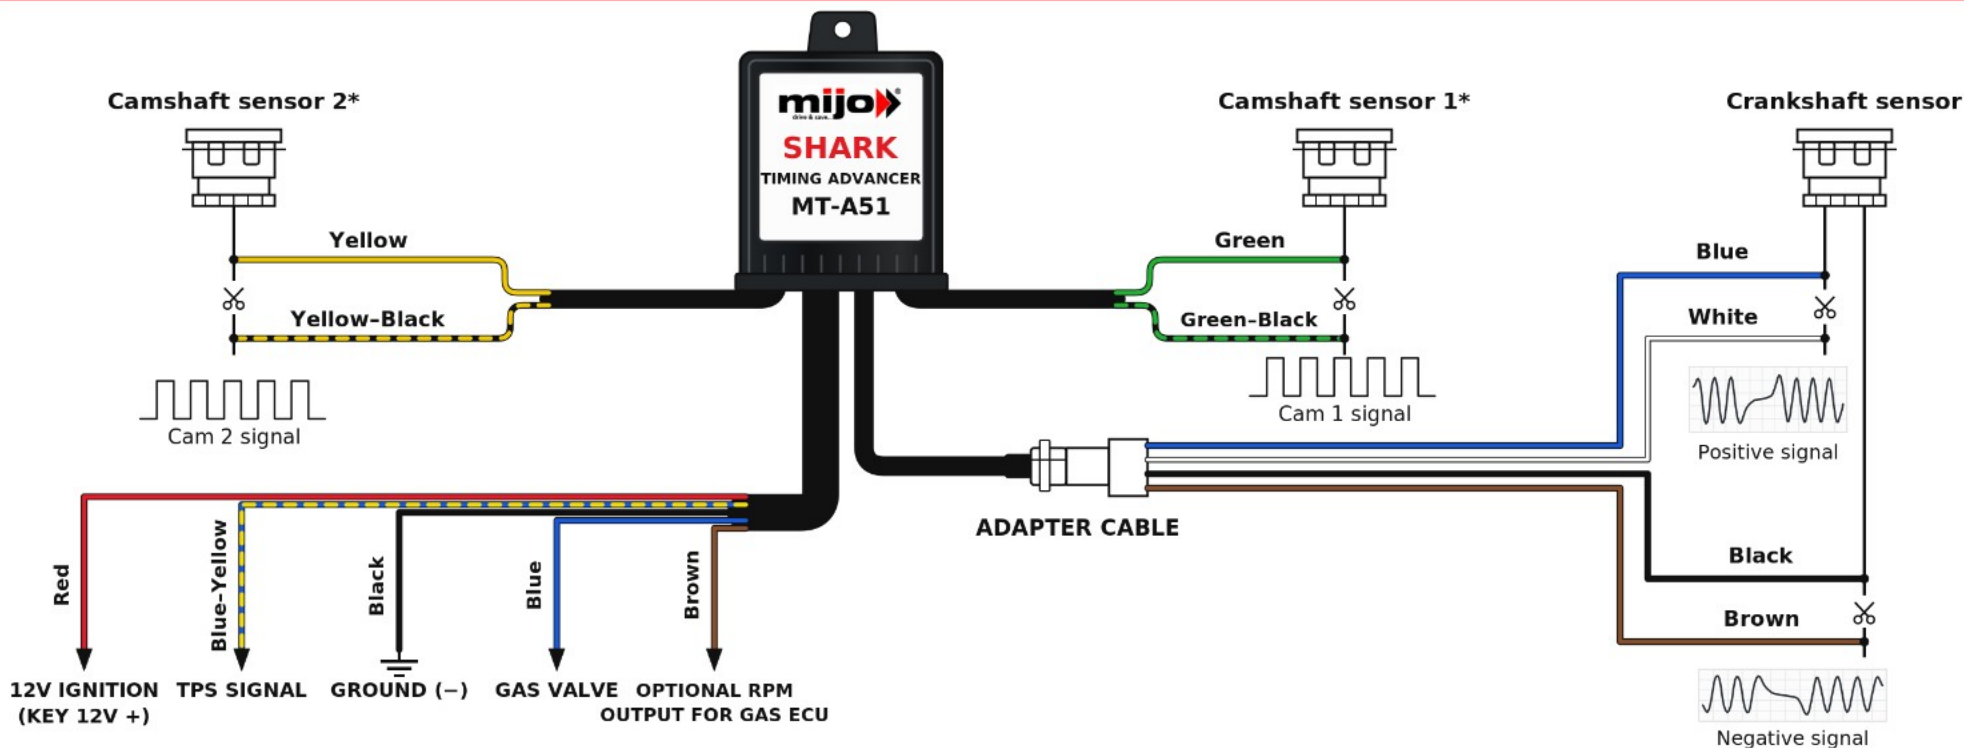

* CAMSHAFT SENSOR CONNECTION

Connect the camshaft sensors only if necessary. Reprogram the TAP with the correct configuration to activate advance on one or both camshaft sensors.

SETTINGS AND CONNECTIONS

1 Main connection

Connection for the harness included in the kit.

2 Red LED

ON when the TAP is working in gas mode and advancing.
OFF when the vehicle is in petrol mode, the advance is deactivated, or the TAP is not suitable or damaged.

3 Microswitches


Used to set the TAP.

4 Trimmer

Used to set the advance threshold according to the TPS signal.


5 Emergency connector

Used to bypass the TAP in case of failure.

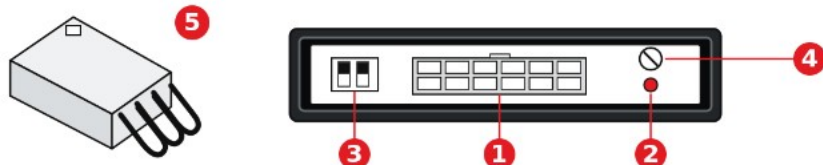


A Default setting

Switches 1 and 2: OFF

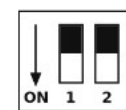

B Advance setting — Switches 1 and 2

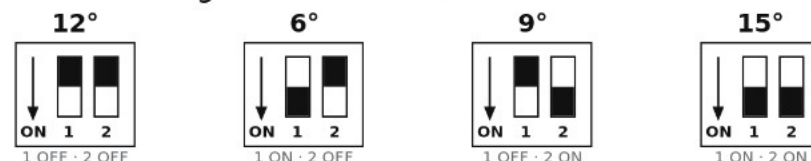

C Advance activation — Adjusting trimmer

Advance always activated



Advance activated according to TPS

